


SALLEN-KEY : Build Instructions - Add-On

The Problem

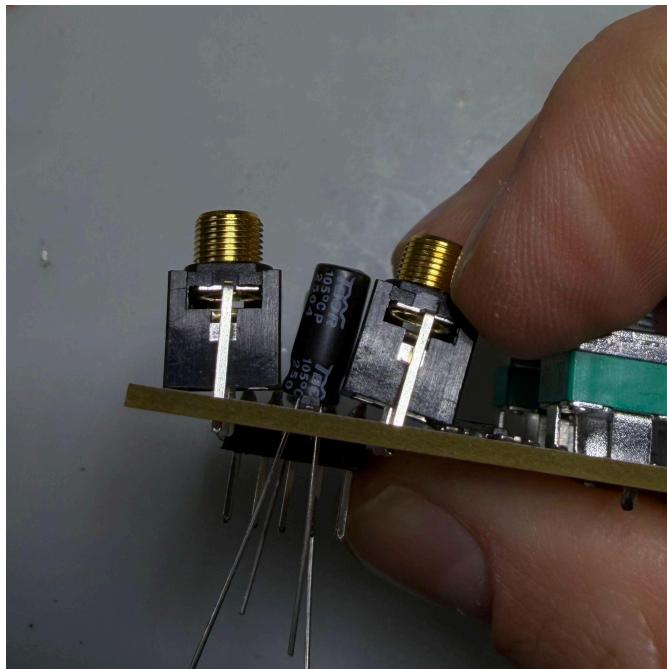

We realized that a few Sallen-Key DIY Kits were shipped with electrolytic capacitors that are slightly larger than the intended size.

Because of this, the capacitors can't be soldered in their original location and need a slightly different assembly.

When building your DIY Kit, if you notice that your capacitors are the taller version, please follow the steps below.

The Solution



If the capacitors are too tall to be installed on the front side of the PCB, you can simply solder them on the back side instead.

Just make sure to double-check their orientation before soldering.